

# SETTING AN EXPOSURE TIME

## EXPOSURE KEYPAD

For most, transparencies the vacuum will be set for 30 Sec and the LtU for 60 Sec.



### Setting the Vacuum & Exposure time

1. Press the "SET" button once for the vacuum. and twice for LtU (Light Units).
2. There will be a blinking \_ (underscore line) flashing beneath the numbers of LtU.
3. Press the numbers on the keypad, to set the correct number of LtU. (Either 60 or 120).
4. Press "Enter" to save this selection.

### TO EXPOSE A SCREEN:

Hit the Power button. (Screen will illuminate.

Then when you have the correct exposure set:

Hit the A (Start Button)

Vacuum will start, and count down.

Then you will see a light appear on the thickness of the glass and the timer will count down again.

When done, HIT B, (OK)

### EXPOSURE TIMES:

Graphite drawing or Laserprint on transparency or oiled newsprint	60 LtU
Standard Inkjet transparency	60 LtU
Inkjet print on oiled newsprint	120 LtU